



INSTRUCTION SHEET

CRH-WCR65 CONDENSATE EVAPORATOR

INSTALLATION INSTRUCTIONS & MAINTENANCE RECOMMENDATIONS

The CRH-WCR65 Condensate Evaporator has a capacity of 6500ml.
240v/400w

ASSEMBLY AND PLACEMENT ON A HORIZONTAL SURFACE

1. Position the evaporator in a well ventilated area to allow the moisture laden air to be carried off.
2. Do not operate the evaporator on any wet surface.
3. Do not place the evaporator on any wood surface or near any flammable materials.
4. Do not allow power cord to contact hot outside surface of pan.

WIRING

5. The evaporator is marked with its voltage rating. Use a separate electrical line connected to a fuse block or circuit breaker of proper capacity to assure full voltage. Voltage drops will decrease operating performance and voltage surges may damage unit.

MAINTENANCE

6. Do not remove the enclosure cover or tamper with any components.
7. Clean the pan regularly for maximum performance. Clean by brushing out loose residue with a stiff brush.

EVAPORATION RATES

Time After	3lt Cold Water Dump. Litres Remaining	6lt Cold Water Dump. Litres Remaining
1 Hour	2.9lt	5.9lt
2 Hours	2.2lt	5.7lt
3 Hours	1.75lt	4.9lt
4 Hours	1.06lt	3.7lt
5 Hours	0.52lt	3.05lt
6 Hours	0.0	2.49lt

NOTE

The installer of this unit must provide the refrigeration/air conditioning equipment operator with any applicable instructions and warnings for its use, as installed in the equipment.