

Spring Cartridge Assembly


1. Assemble spring cartridge as shown



2. Slip bushing over hexagon pin on mounted hinge, then insert adjustment pin into adjustment bushing assembly



3. Grasping adjustment pin, compress spring and place adjustment bushing assembly over round pin

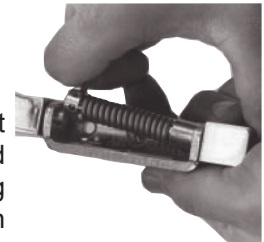

4. Adjust tension, then insert stop pin in hole of adjustment bushing assembly



ITEM	STOCK CODE	DESCRIPTION	MATERIAL	MOUNTING
a.	K1216	Non-rise adjustable hinge with 28.6mm offset. Offset adjusts 4.8mm in-and-out to compensate for gasket compression as needed.	High pressure die-cast zinc flange and adjustment plate, steel strap, stainless steel cover.	Drilled for 5.5mm screws
b.	K1219	Adjustable edgemount hinge with 22.2mm offset. Offset adjusts 3.2mm in-and-out to compensate for gasket compression as needed.	High pressure die-cast zinc flange and adjustment plate, brass cover, zinc plated steel strap, nylon bushing. Polished finish.	Drilled for 5.0mm screws
	K1216SK	Spring cartridge kit to suit K1216 & K1219.	-	-